


INSTALLATION INSTRUCTIONS

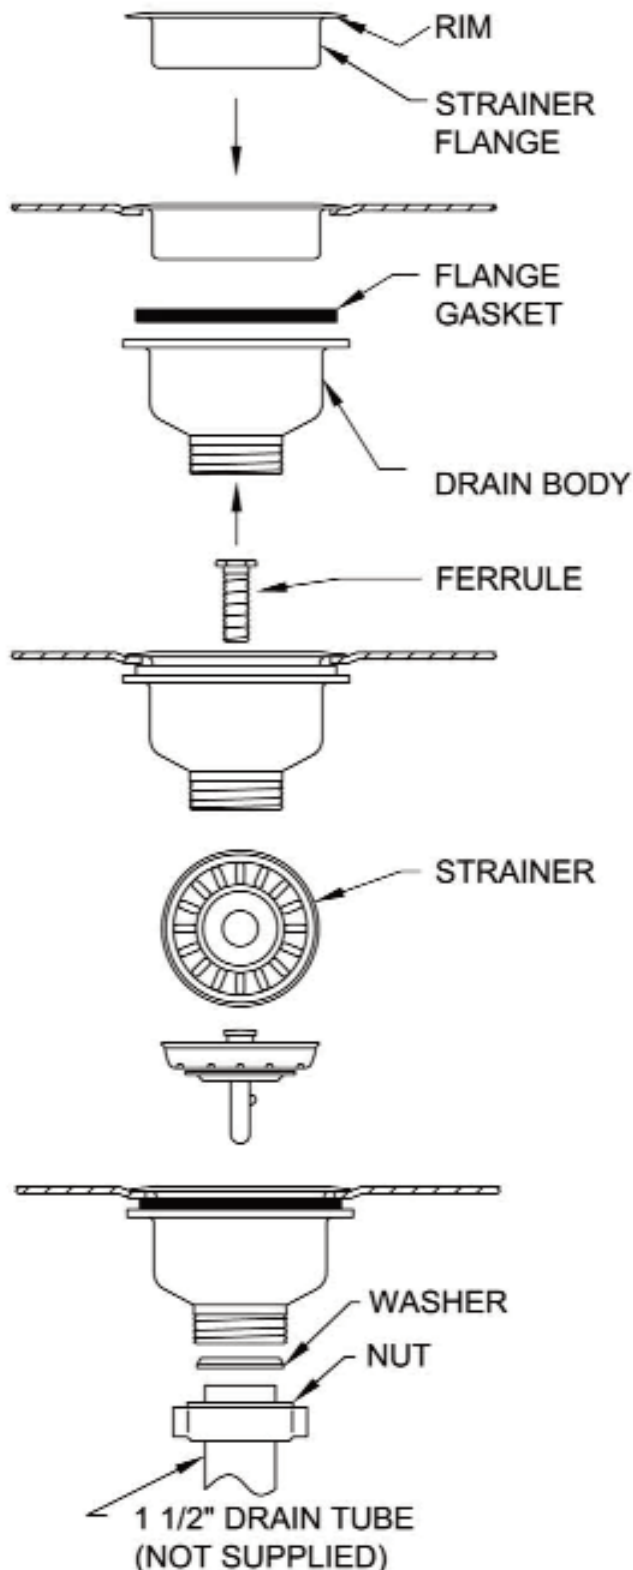

- ① APPLY A SMALL AMOUNT OF NON-ACID SILICONE UNDER THE RIM OF STRAINER FLANGE AND PUSH DOWN INTO SINK
- ② LUBRICATE FLANGE GASKET WITH WATER, PLACE INTO LIP OF DRAIN BODY AND POSITION DRAIN BODY ON THE SINK BOTTOM
- ③ LINE UP RIBS IN DRAIN BODY AND STRAINER FLANGE THEN SCREW IN FERRULE.
CAUTION: HAND TIGHTEN THEN 1/4 TURN WITH SMALL SCREW DRIVER. DO NOT OVER TIGHTEN
- ④ PUSH STRAINER INTO FERRULE IN DRAIN BODY
- ⑤ SLIDE NUT ON 1 1/4" DRAIN TUB PLACE WASHER ON DRAIN TUBE SMALL DIAMETER UP. PUSH TUBE INTO DRAIN BODY AND **HAND TIGHTEN** THE NUT. TEST FOR LEAKS.

FINISH CARE AND MAINTENANCE

DO NOT USE ANY HARSH ACID BASED DETERGENTS OR CLEANERS SUCH AS SOFT SCRUB[®] SCRUBBING BUBBLES[®] OR COMET[®] TO CLEAN, USE ONLY A DAMP SOFT CLOTH. STANDARD WINDEX[®] CAN ALSO BE USED SPARINGLY.

WARRANTY

CONTACT BARCLAY FOR WARRANTY INFORMATION. CLAIMS REQUIRE PROOF OF PURCHASE.